
# SP9 SINGLE 1000832

## **SP9 TWIN** 1000833

### **DIMENSIONS**

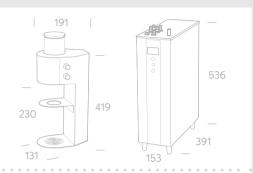

• Compatible with most manual pourover brewing devices (e.g. Chemex, Kalita, Hario)

- Precise water temperature
- Preset brewing time (1 to 5 minutes)
- Preset volume (150 to 750ml)

MIX 1 button font can be used with SP9 boiler and single head.

Note: single temperature only.



FONTS & ACCESSORIES	NAME ORDER CODE	DIMENSIONS (D x W x H mm)	TAP TO COUNTER (mm)
	MIX 1 Button Font 1000878	30 x 30 x 242	200
	MIX Drip Tray 2300268	170 x 125 x 35	_

SINGLE-SERVE UNDERCOUNTER PRECISION BREWER.

**BOILERS & HEADS** 

PACKAGING


NAME ORDER CODE	POWER @ 230V	IMMEDIATE DRAW OFF	CUPS PER HOUR	HEAD DIMENSIONS (D x W x H mm)	UNDERCOUNTER BOILER DIMENSIONS (D x W x H mm)	TAPTO COUNTER (mm)	PLUMBING REQS
SP9 Head only 1000830	_	_	_	191 x 131 x 420	_	_	3/4" BSP
SP9 Single 1000830	2.4kW	4 L	25	191 x 131 x 420	395 x 155 x 565	230	3/4" BSP
SP9 Twin 1000833	2.4kW	4 L	50	191 x 131 x 420 (per head)	395 x 155 x 565	230	3/4" BSP

NAME	PACKED WEIGHT	PACKAGING DIMENSIONS	QUANTITY PER
ORDER CODE		(L x W x H mm)	PALLET
SP9 Single	4.5kg (head) + 14.1kg (boiler)	585 x 290 x 216 (head)	12
1000830	Total: 18.6kg (2 boxes)	510 x 270 x 715 (boiler)	
SP9 Twin	4.5kg (per head) + 14.1kg (boiler)	585 x 290 x 216 (head x2)	12
1000833	Total: 23kg (3 boxes)	510 x 270 x 715 (boiler)	
MIX 1 Button Font 1000878	2kg	290 x 570 x 215	30


SP9 marco

#### **SP9 SINGLE-SERVE PRECISION BREWER**

#### COUNTER CUT-OUT

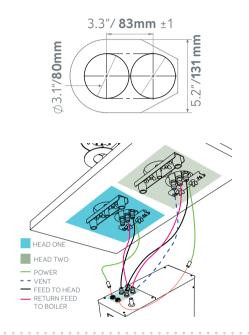

SP9 SINGLE 1000832 SP9 TWIN 1000833

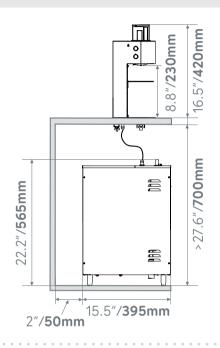

#### **VENTILATION REQUIREMENTS**

50mm/1.9" clearance required at each side and back of machine if installed in an enclosed cabinet.

#### **ELECTRICAL INSTALLATION PROCEDURE**

When installing the machine, always observe the local regulations and standards. The standard machine is supplied with a UK 3-pin plug. For EU models a 2-pin CEE-7 plug will be supplied. US models will be supplied with the suitable plug. A suitable mains power supply socket should be available within easy access of the appliance so that it can be disconnected easily after install.

#### PLUMBING INSTALLATION PROCEDURE

- Ensure that the equipment is installed according to local plumbing & water regulations.
- Mains water pressure required (limits): 14.5 145psi (100 - 1000kPa, 0.1 - 1MPa).
- Requires inline water filter within your water specifications.
- The machine is supplied with a 3/4" BSP connection.
- Turn on the water to flush any impurities, dust etc from the inlet hose and water pipe. Allow several litres through. Especially for new installations.
- Connect the hose to the inlet valve of the boiler. Make sure a sealing washer is fitted.

- Turn on water and check for leaks.
- The SP9 Head has a drip tray attached with a drain outlet which should be plumbed to waste.

#### OPERATING BOILER FOR THE FIRST TIME

- Check that all installation procedures have been carried out.
- Ensure the water valve is on.
- Plug in the SP9 Boiler to an appropriate electrical supply and press the power button on the front of the machine.
- The light will glow green and the machine will fill to a safe level, above the elements, before heating.
- The "Ready/Status" light will cycle two red flashes while the machine is filling to the safe level.
- Whilst the machine is above the safe level and filling, the "Ready/Status" light will remain blank.
- The "Ready/Status" light will glow green when the machine is both full and up to normal operating temperature.
- The SP9 Boiler takes 15 minutes to heat up initially.
- The SP9 Boiler is now ready for use.

**NOTE:** Because the machine is electronically controlled no priming is necessary.